



ARM808-RS

Input/Output Expander Module

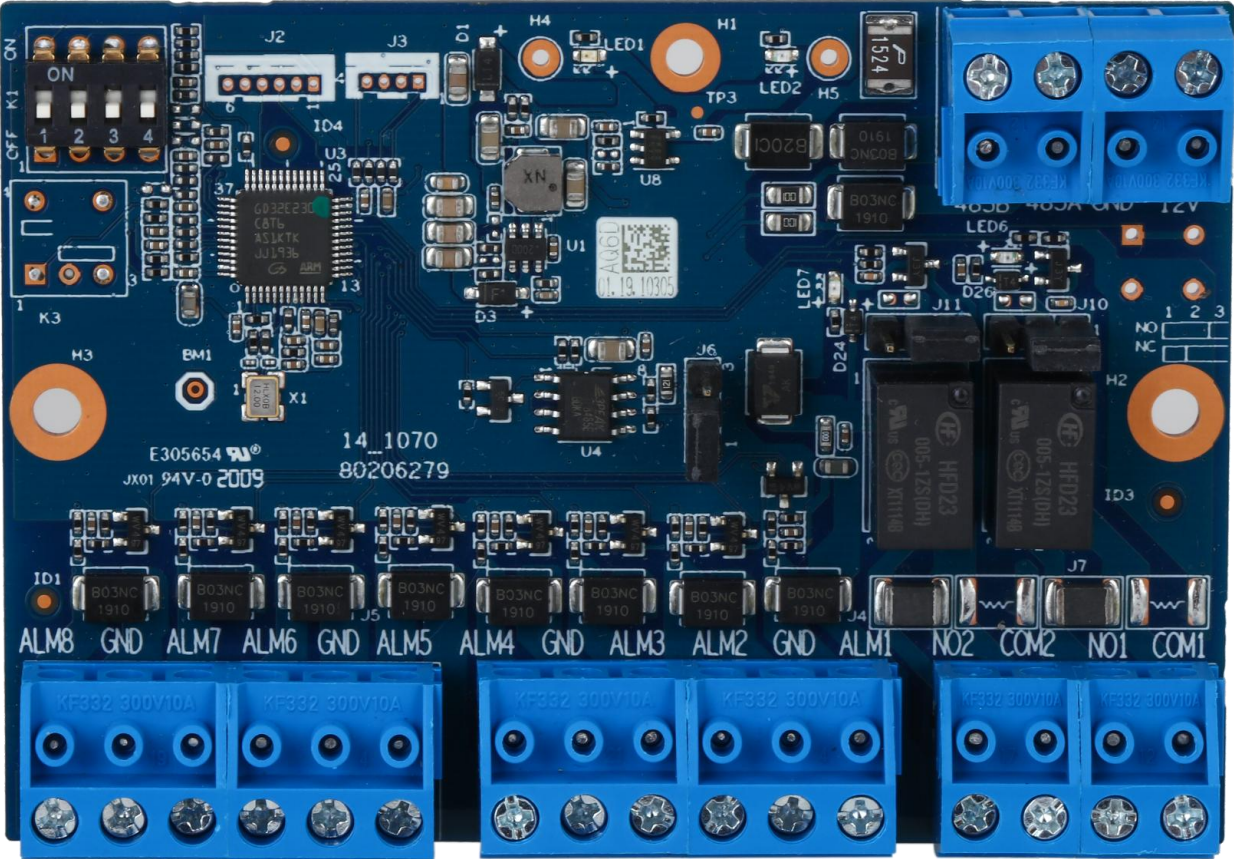

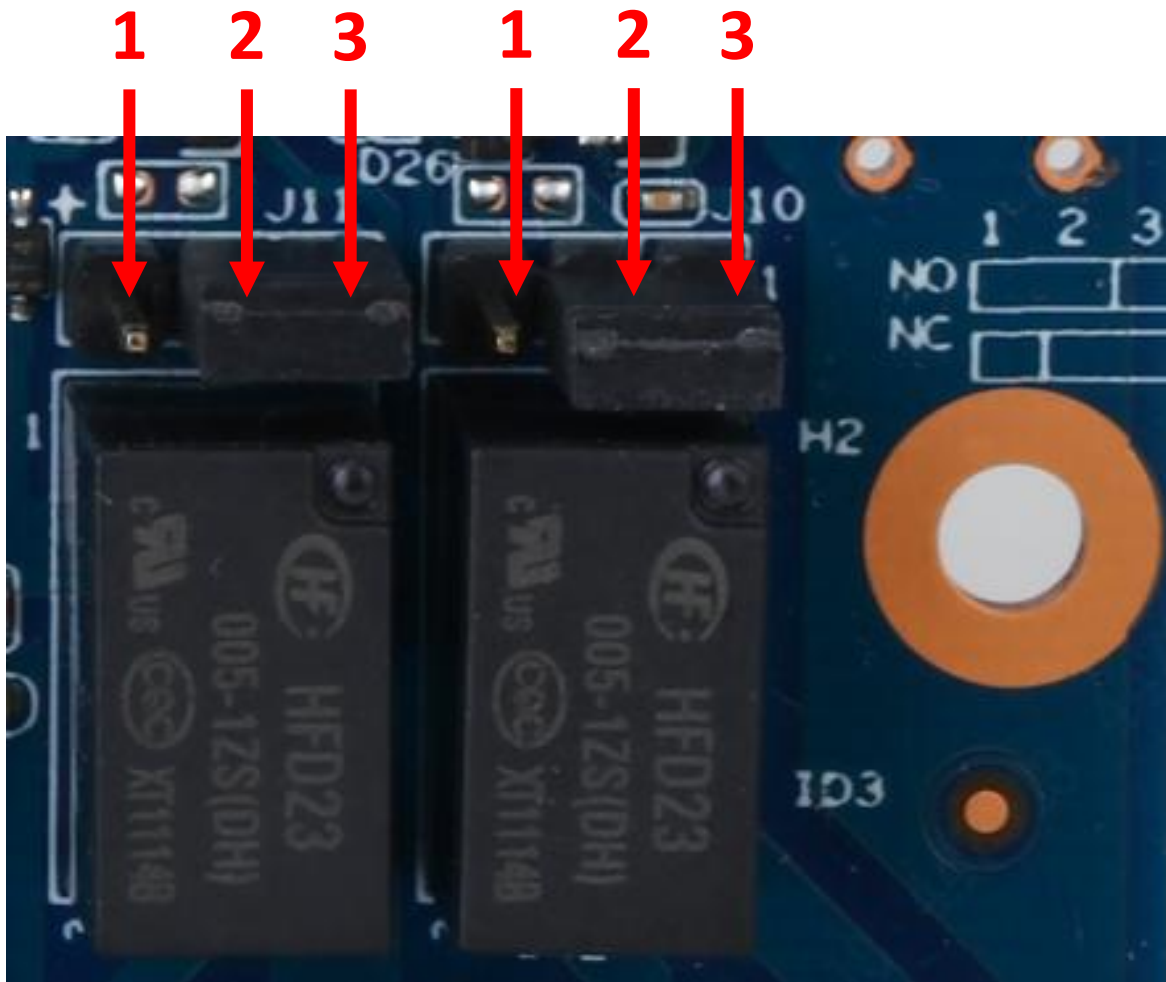


1 + 2

= NO (Normally Open)

2 + 3

= NC (Normally Close)

Module Address

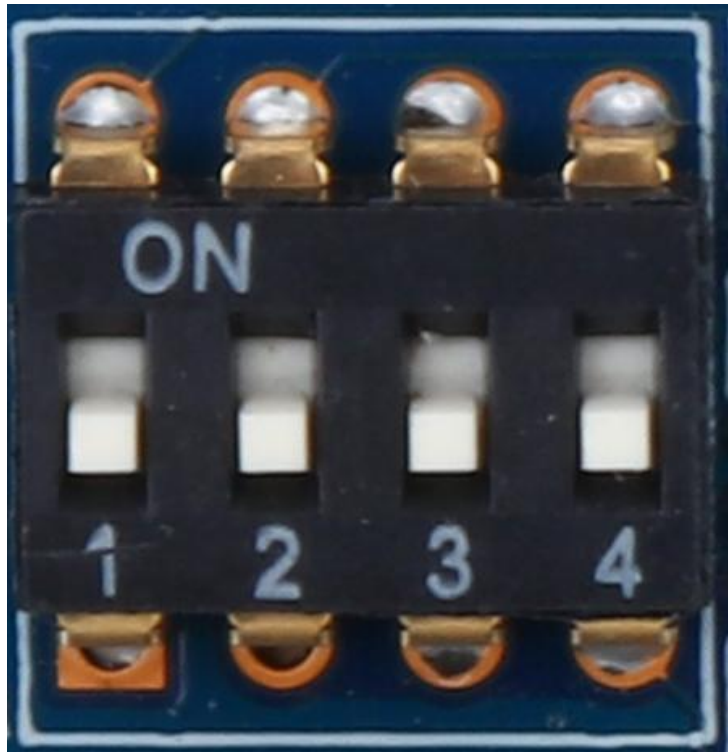

ON
Position

OFF
Position

DIPSWITCH	POSITION	DIPSWITCH	POSITION	DIPSWITCH	POSITION	DIPSWITCH	POSITION	ADDRESS
1	OFF	2	OFF	3	OFF	4	OFF	0
1	ON	2	OFF	3	OFF	4	OFF	1
1	OFF	2	ON	3	OFF	4	OFF	2
1	ON	2	ON	3	OFF	4	OFF	3
1	OFF	2	OFF	3	ON	4	OFF	4
1	ON	2	OFF	3	ON	4	OFF	5
1	OFF	2	ON	3	ON	4	OFF	6
1	ON	2	ON	3	ON	4	OFF	7
1	OFF	2	OFF	3	OFF	4	ON	8
1	ON	2	OFF	3	OFF	4	ON	9
1	OFF	2	ON	3	OFF	4	ON	10
1	ON	2	ON	3	OFF	4	ON	11
1	OFF	2	OFF	3	ON	4	ON	12
1	ON	2	OFF	3	ON	4	ON	13
1	OFF	2	ON	3	ON	4	ON	14
1	ON	2	ON	3	ON	4	ON	15

RS485 Connection

Η Σύνδεση του **GND** από το Καλώδιο του RS485, είναι Προαιρετική. Συστήνεται να συνδέεται, εφόσον υπάρχει η δυνατότητα, διότι φιλτράρει τυχόν Παρεμβολές

485B
Yellow

485A
Purple

GND/
DC -

DC +

